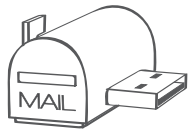# DREAM CHEEKY
MAIL BOX FRIENDS ALERT user manual

⚠ **Before using the product, carefully read this manual and retain it for future reference.**

This packaging contains:

Minimum system requirements:

- Windows 7/ Vista / XP SP2 or later
- One available USB port
- 50 MB available hard disk space
- VGA or higher-resolution monitor
- Sound card
- CD-ROM drive

Mail Box Friends Alert x 1   Install CD x 1   Instruction x 1

⚠ Safety

Precautions:
Before using this product, carefully read this manual and retain it for future reference.

Safety:
This product has been designed with the highest concern for safety.
However, any electrical device, if used improperly, has the potential of causing fire, electrical shock or personal injury. To help ensure accident-free operation, follow these guideline:
Stop use, unplug the USB cord, immediately if the device functions in an abnormal manner, produces unusual sounds or smells or becomes too hot.

Use and Handling
1. Do not expose the Mail Box Friends Alert to high temperatures, high humidity,or direct sunlight.
2. Do not expose the Mail Box Friends Alert to dust, smoke or steam.
3. Do not allow small particles to get into the Mail Box Friends Alert.

4. Do not place the Mail Box Friends Alert on surfaces that are unstable or subject to vibration.
5. Do not throw or drop the Mail Box Friends Alert or subject it to physical shock.

Cleaning:
1. For safety reasons, unplug the USB cord from your computer before cleaning.
2. Wipe gently with a damp cloth, and then dry the surface.
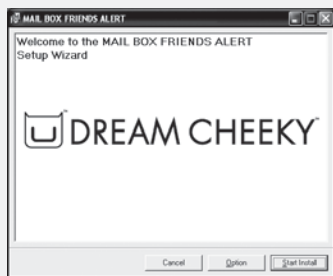3. Do not use solvents or other chemicals to clean the exterior off the Mail Box Friends Alert.

General:
1. Should the product perform unexpected function, unplug the unit and then restart the computer.

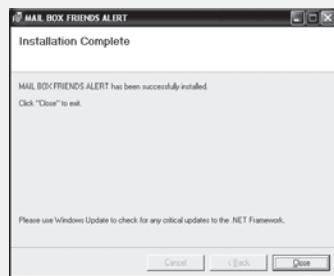Note: See www.dreamcheeky.com for full online support link and trouble shooting

Installation

Installing the Mail Box Friends Alert program into your PC couldn't be easier. Just follow these simple instructions and you will be ready to go in no time!
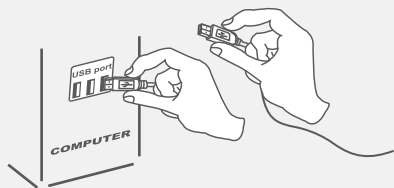
1 The install program will show up automatically. (If not manually click "setup.exe" on the CD drive). On the Set up window, click "Start Install".

2 Installation complete window will show up after file are copied. Click "Close" to finish.
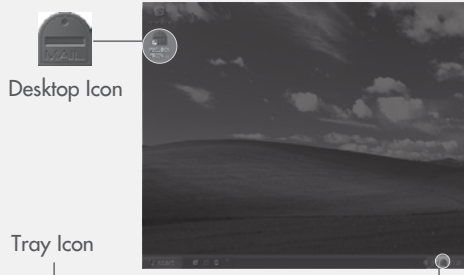
3 i.) Connect the USB cable attached to the Mail Box Friends Alert to a USB port located on your PC prior to playing with it.

ii.) Double click on the Mail Box Friends Alert program on your desktop.

4 Press the Desktop Icon to run the Mail Box Friends Alert software. (If on a network system, this may not appear. Please find the software under start menu.)
Tray Icon will be appear when the software is running.

Desktop Icon

Tray Icon

⚠ **Note:** Install the software before connecting your Mail Box Friends Alert.

⚠ **Note:** Using a USB HUB or docking station may result in the loss of power to the Mail Box Friends Alert. This could create the Unit to not work properly. Please plug it directly into the USB port on your computer.

Introduction

This demonstrates how to use the Mail Box Friends Alert. Load the Mail Box Friends Alert software provided and use these instructions to maximize your playing capability.
Note: Please be sure to plug your Mail Box Friends Alert into a USB port in your PC prior to playing with the unit.
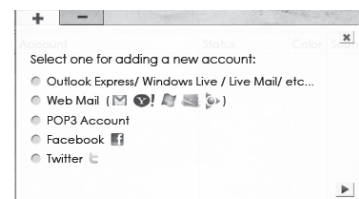
▶ How to Play

Connect the USB Mail Box Friends Alert to a USB port located on your PC prior to playing with it.
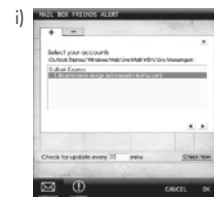
1 TO ADD AN ACCOUNT:

i) Press the [ACCOUNT] button first.

ii) Then press the [+] button to add an account.

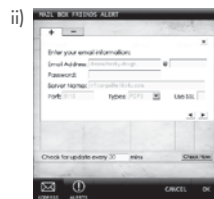iii) Choose the email services that you are using, then press ▶ to move to next step.

Select one for adding a new account:
- Outlook Express/ Windows Live / Live Mail/ etc...
- Web Mail ( )
- POP3 Account
- Facebook
- Twitter

2 FOR USER USING
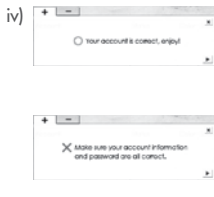**Outlook Express/Windows Live/ Live Mail /etc**

i) Select your account on the list, then press ▶ to next step.

ii) Enter your email password into the password field, then press ▶ .

iii) The Software will check the information that you just put in. Please wait for few seconds.

iv) You will get a successful message, if your information is correct, press ▶ to finish the setup.
You will get a fail message, if your password is wrong, press ▶ to edit it.

3 FOR USER USING
Gmail/Yahoo mail/Y!mail/AOL/Hotmail/Windows Live

i) Enter your email address, services provider and password, then press ▶ .

ii) The Software will check the information that you just put in. Please wait for few seconds.

iii) You will get a successful message, if your information is correct, press ▶ to finish the setup.
You will get a fail message, if your password is wrong, press ▶ to edit it.

4 FOR USER USING
POP3/IMAP

i) Enter your POP3/IMAP server information, email address, services provider and password, then press ▶ .

ii) The Software will check the information that you just put in. Please wait for few seconds.

iii) You will get a successful message, if your information is correct, press ▶ to finish the setup.
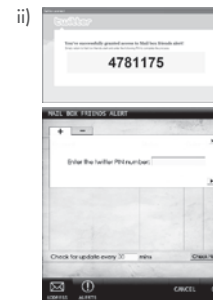You will get a fail message, if your password is wrong, press ▶ to edit it.

5 FOR USER USING
FACEBOOK/TWITTER

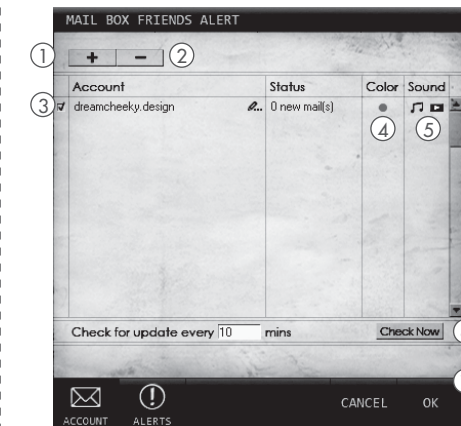i) On facebook, you will require to input your facebook login email and password on the pop-up window, then press "Login" to finish the setup.

On twitter, you will require to input your twitter login email and password on the pop-up window, then press "Allow" to move to next step.
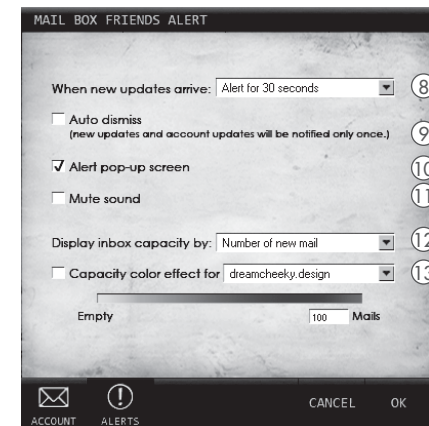
ii) Now twitter will complie a pin code on the pop-up window, now please copy the pin code on the friends alert interface, then press ▶ to finish the setup.

4781175

6 ACCOUNT OPTION

① [+] [-] ②
③ dreamcheeky.design 0 new mail(s) ④ ⑤

Check for update every 10 mins Check Now ⑥
⑦

1. Add account- you can add 20 different accounts
2. Delete account- you can delete the account by press this button when your accounts checkbox is been tick
3. You can edit your account and check the status at anytime.
4. You can personlize your account alert colour here.
5. You can personlize your account alert sound here.
6. Edit your checking period in here or press CHECK NOW to check the alert at anytime.

When new updates arrive: Alert for 30 seconds ⑧
☐ Auto dismiss (new updates and account updates will be notified only once.) ⑨
☑ Alert pop-up screen ⑩
☐ Mute sound ⑪
Display inbox capacity by: Number of new mail ⑫
☐ Capacity color effect for: dreamcheeky.design ⑬
Empty 100 Mails

8. Choose your interval when the new updates arrive.
9. Tick the auto dismiss to limit the alert show only once.
10. Tick the alert pop-up screen which will appear at the bottom righthand of your desktop screen.
11. Check this to mute the software sound
12. Select between new mail or total mails
13. The maximum mail of your mail box

Company Address: 1207, Peninsula Centre, 67 Mody Road, TST East, Hong Kong